

UniSlot™

Pod Install Guide



Ask someone else to
help assemble



Easier with cordless
screwdriver



Handle carefully to keep
in good condition



For further advice on installing your
UniSlot™ display, call 1800 111 488
or email sales@apexdisplay.com.au


APEX
DISPLAY




Pod Install Guide

Step 1: Mark the position of your UniSlot™ Wallmount Pod

Measure your wall and mark the overall length to the outsides of your Pod. If you are unsure what the overall length of your display is, refer to Page 9 and speak to your sales consultant.

Find the highest point of the floor with a level, and mark this point on the wall. This will be your reference point for mounting wall battens in Step 2.

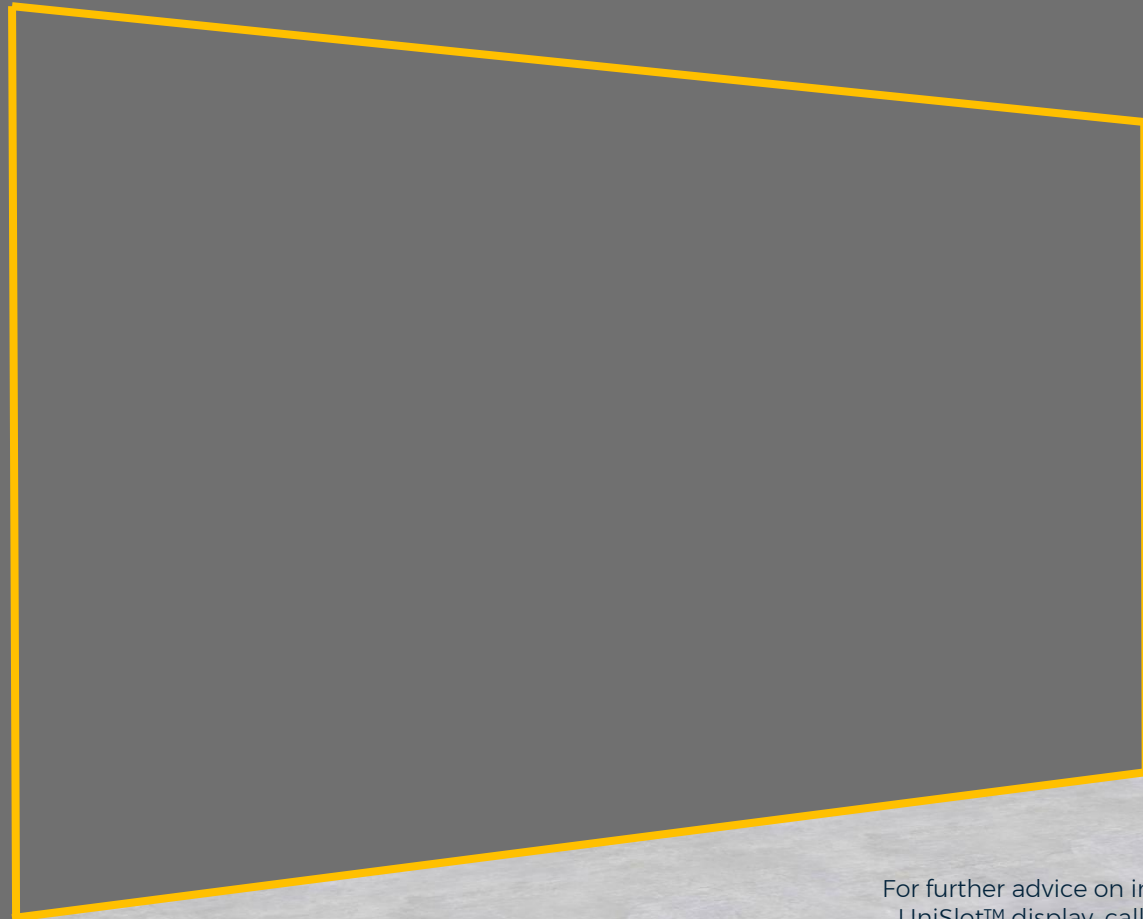




Pod Install Guide

Step 2: Mounting timber wall battens

Cut three 66x18mm timber battens to the required length for your Pod display (34mm shorter than the overall display width).



Starting from the highest floor point identified in Step 1, mount your wall battens level, as shown in the below diagram. Mount the lowest batten first, ensuring each end is 17mm from the marked outsides of your display (Step 1). Repeat this with the upper two battens, following the vertical spacing guide below.

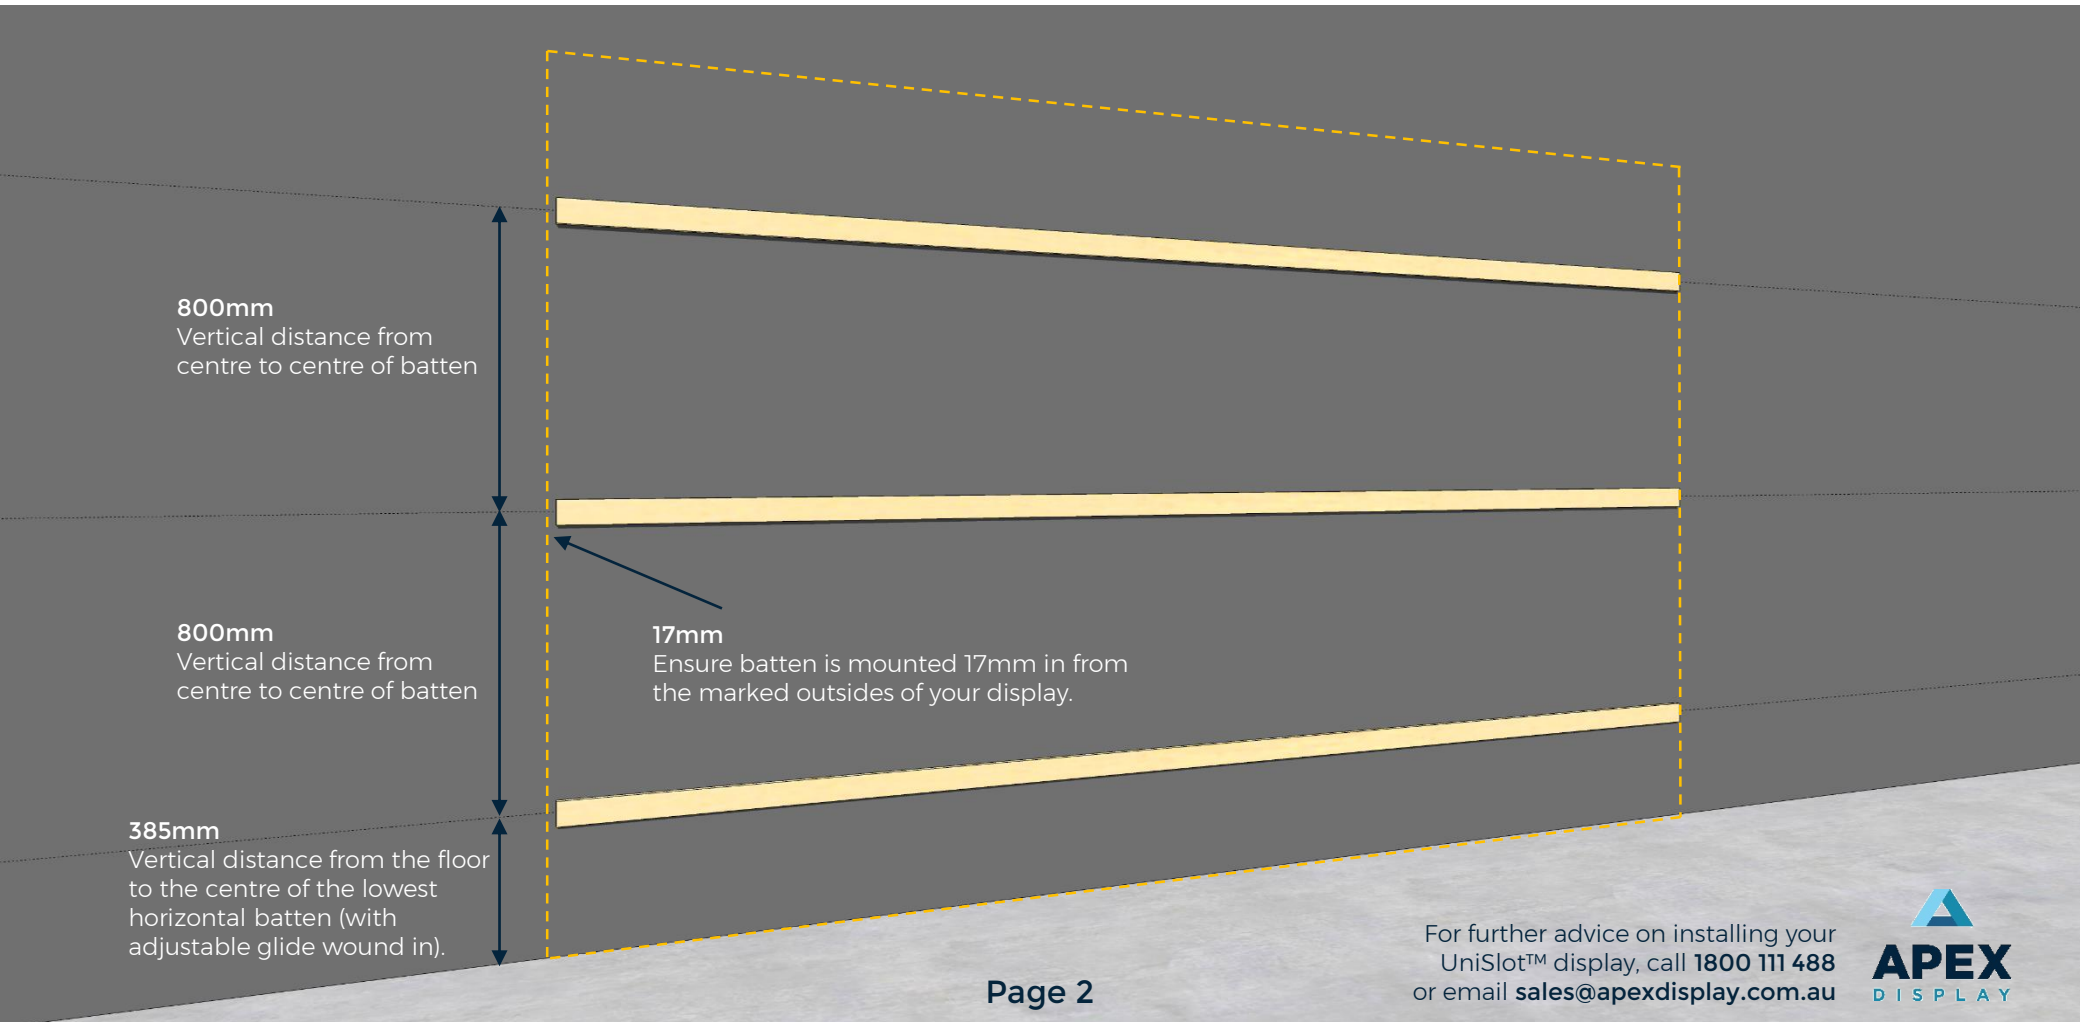

Step 3: Mounting UniSlot™ Wallmount Posts

Mark the positions of the UniSlot™ Wallmount posts along each batten. Refer to the Dimension Guide (Page 9) supplied by your sales consultant. The outer side of your outer posts must be flush with the ends of the wall battens. Securely mount the posts to the timber battens.

Ensure the posts are installed level (a UniSlot™ crossbar with a level is a good way of checking).

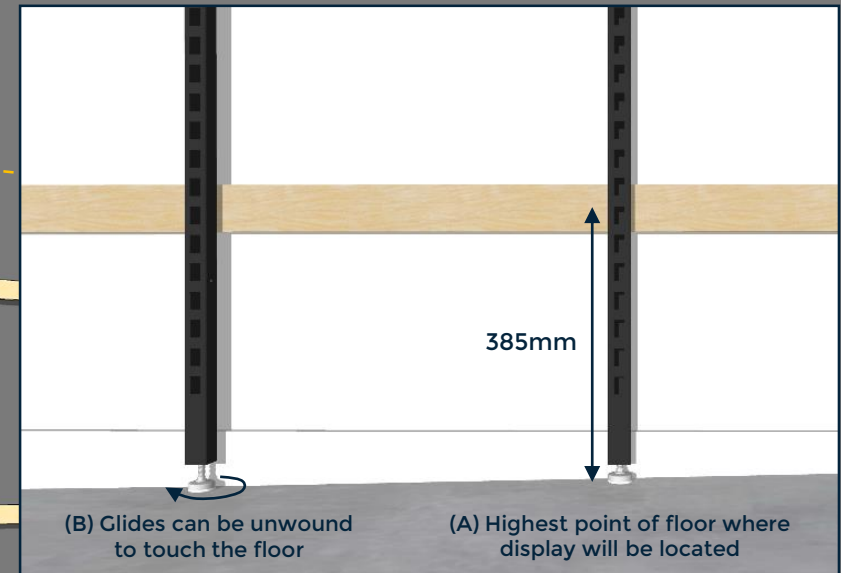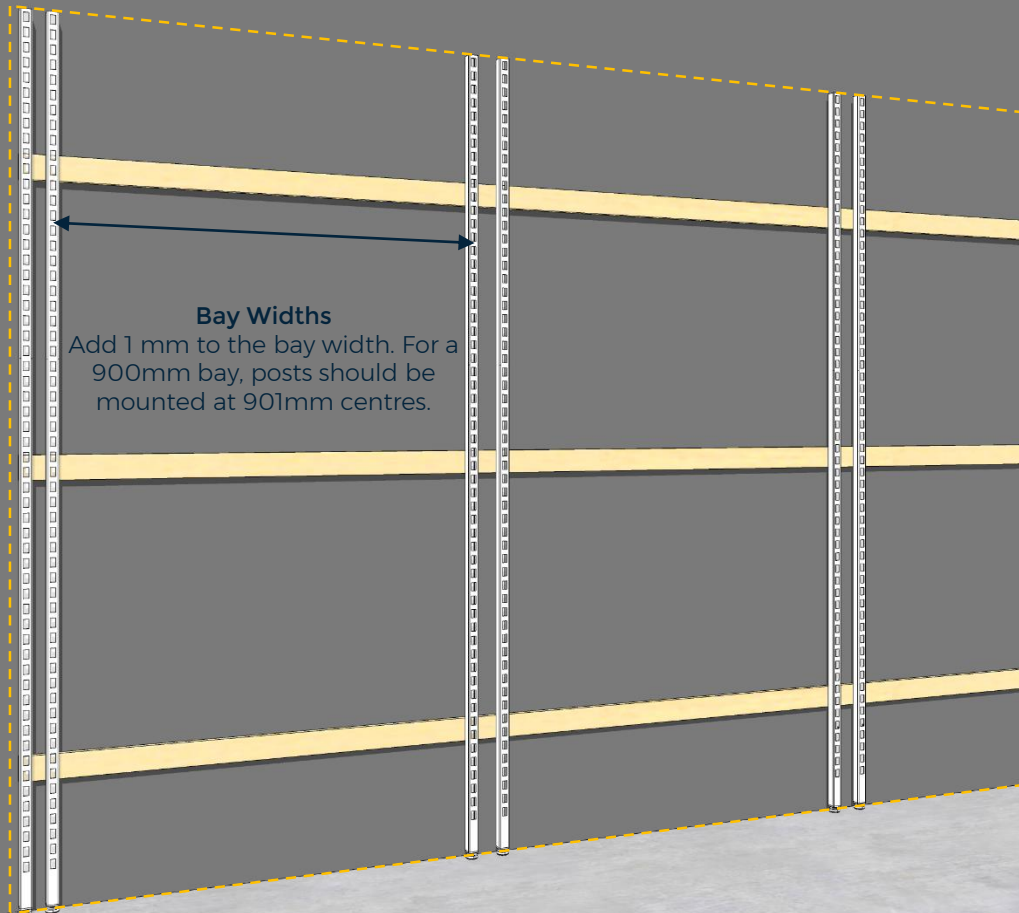

Very Helpful Tip

If your floor is uneven, find the highest point using a spirit level and mark this on the wall (A). Use this point for measuring the mounting location of the first batten. Mount all posts level, then unwind the glides until they are touching the floor (B).




Pod Install Guide

Step 4: Installing UniSlot™ Back Panels

If you have purchased UniSlot™ Back Panels, now is the time to attach them to the wall mounted posts. Ensure you install the panels with the “TOP” sticker on the back of the panel facing upwards.

Tip - If your display contains downlights, it is best to run an extension lead behind the back panels

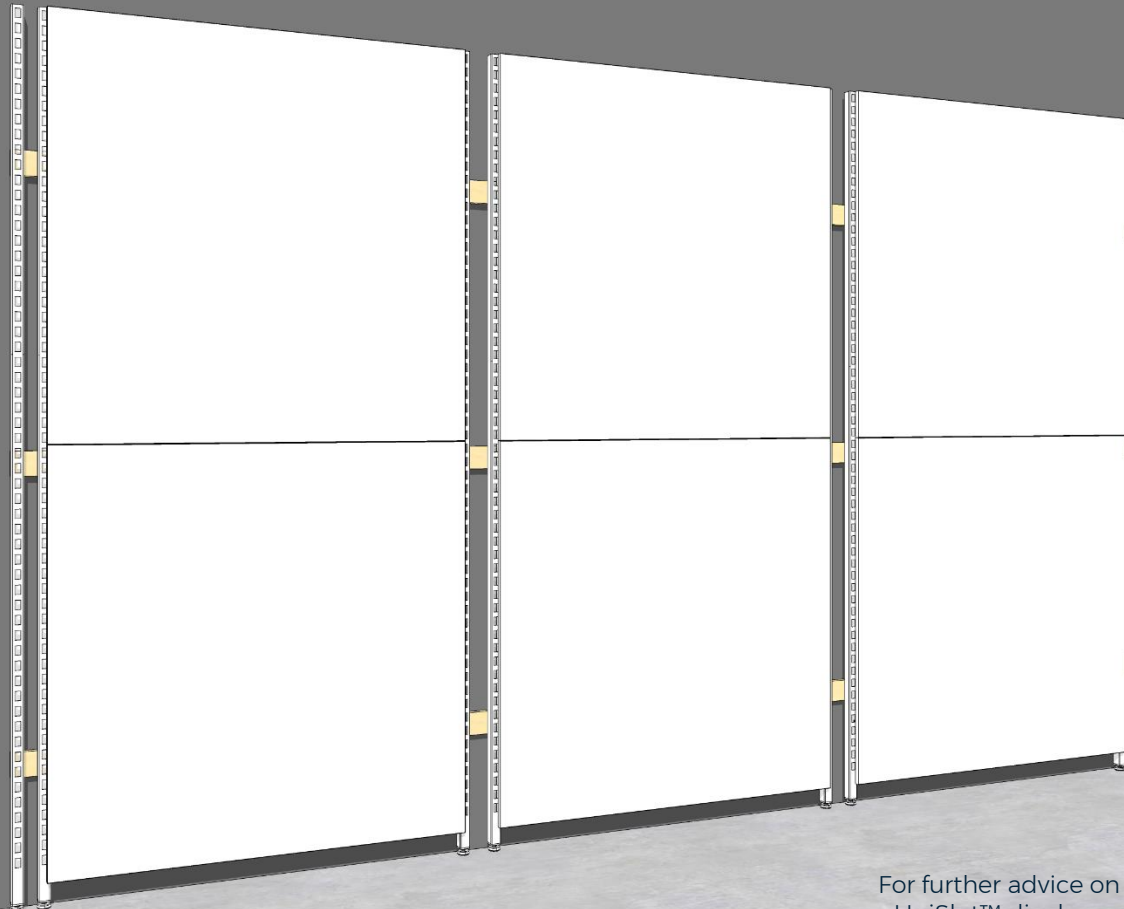




Pod Install Guide

Step 5: Installing UniSlot™ Pod Wings

Centre wings can be clipped directly onto the posts. Take care to ensure they are fully secured. If there is a skirting board or other obstruction in your install location, you will need to notch either the skirting board or a section of the Left and Right Wings before installing. Take care to ensure all wings are securely attached to the wall mounted posts.

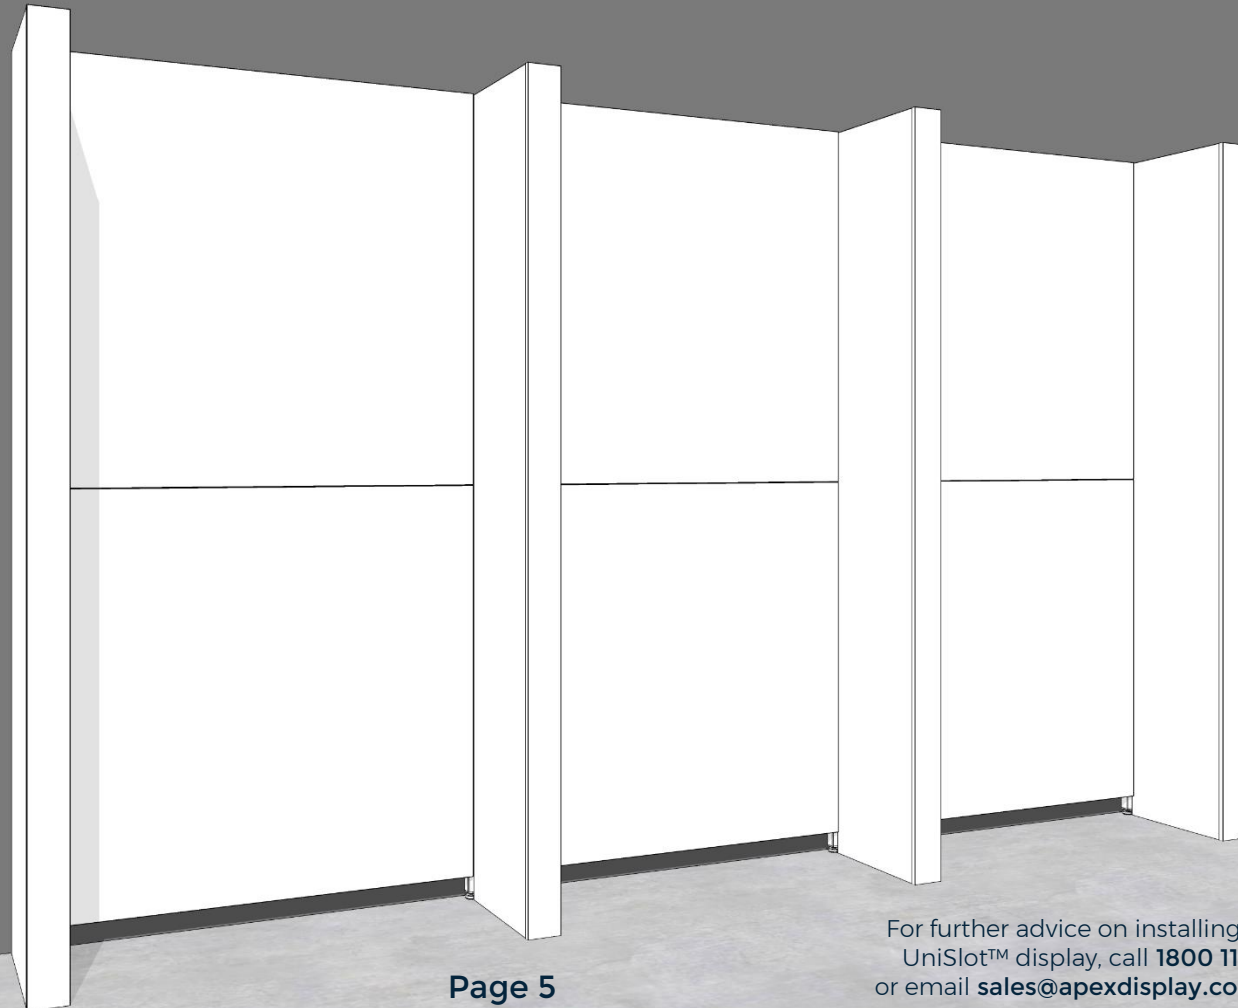




Pod Install Guide

Step 6: Installing UniSlot™ Header Units & Lighting


If you have purchased UniSlot™ Headers, clip these into the posts, as shown below. Take care to ensure the brackets have securely located onto the posts. If your headers have downlights, insert the downlights now and connect them to a power board.

Tip: A stepladder is necessary for this step.

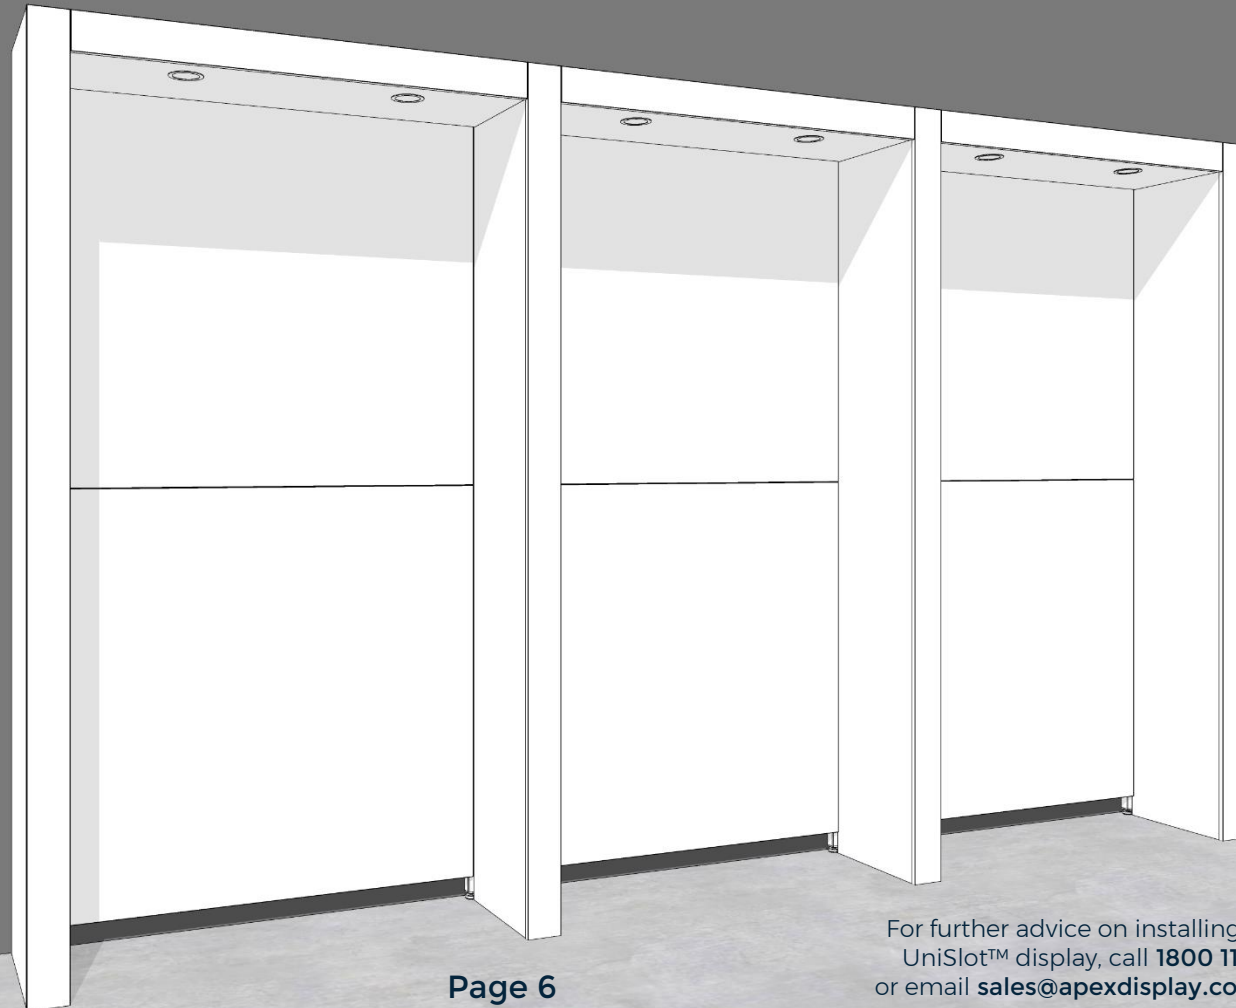

Step 7: Installing UniSlot™ Base Shelves & Skirts


If you have Base Shelves & Skirts, attach the brackets and skirts now. Once fully assembled, they can be clipped into the lowest position on the wall mounted posts.

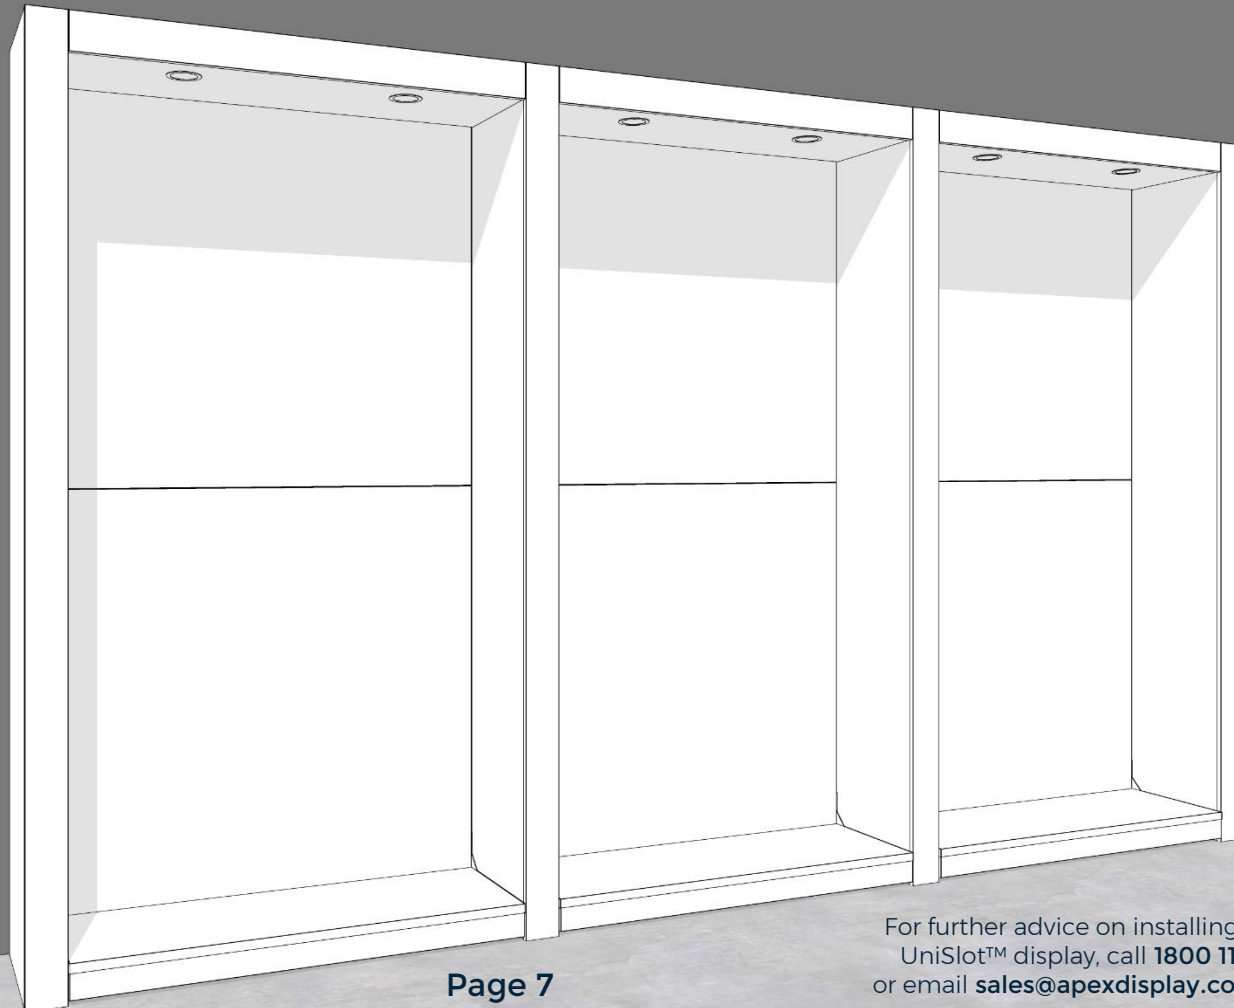


Step 8: Installing other UniSlot™ accessories

The last step to installing your UniSlot™ Pod display is installing your accessories – shelves, hangrails, crossbars, forward-facing arms etc.

Give your display a wipe over with a damp cloth and spray & wipe, to remove any dirt or dust from the manufacturing process and installation.

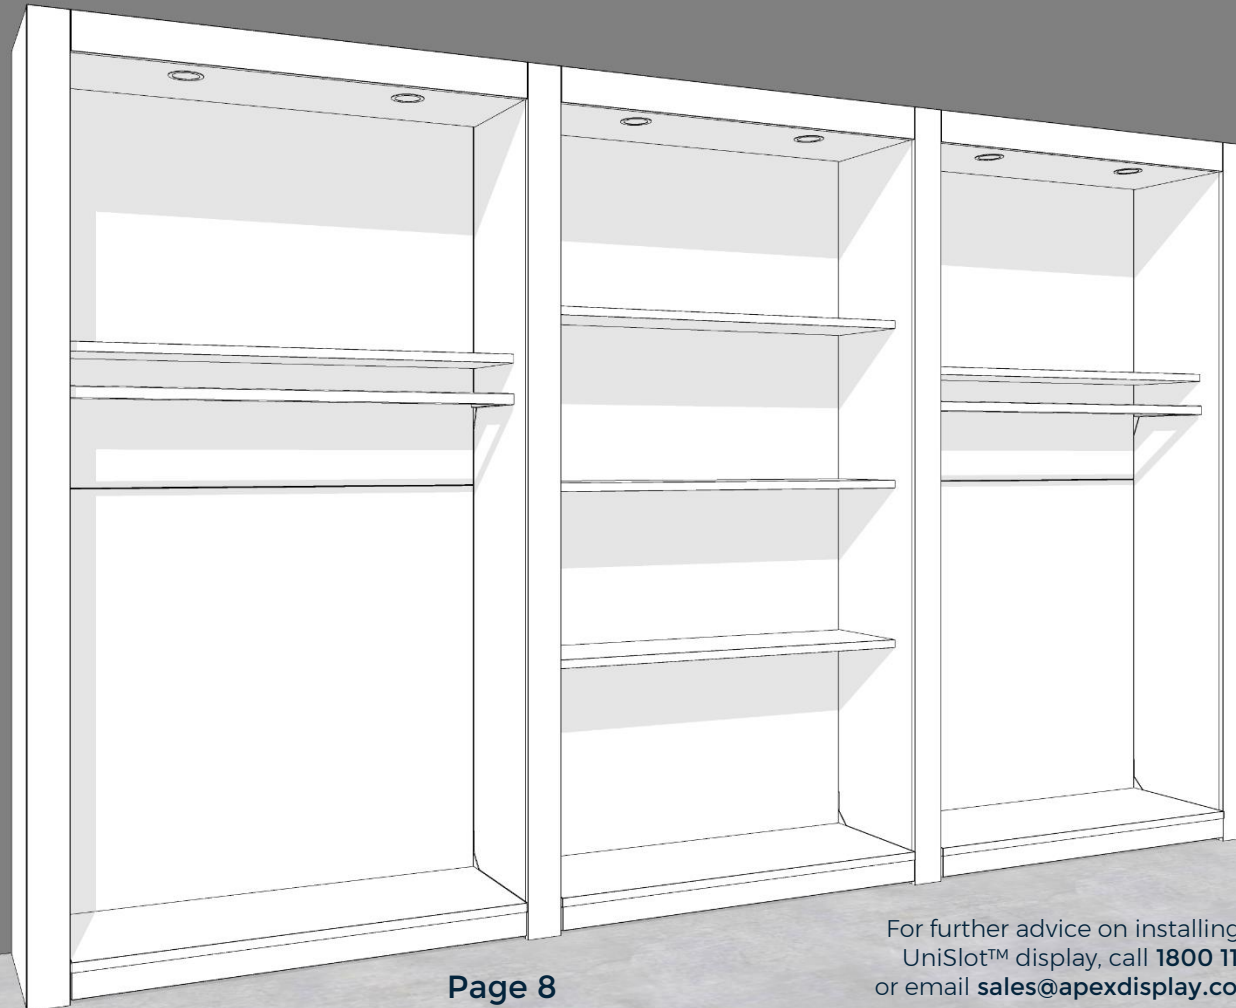

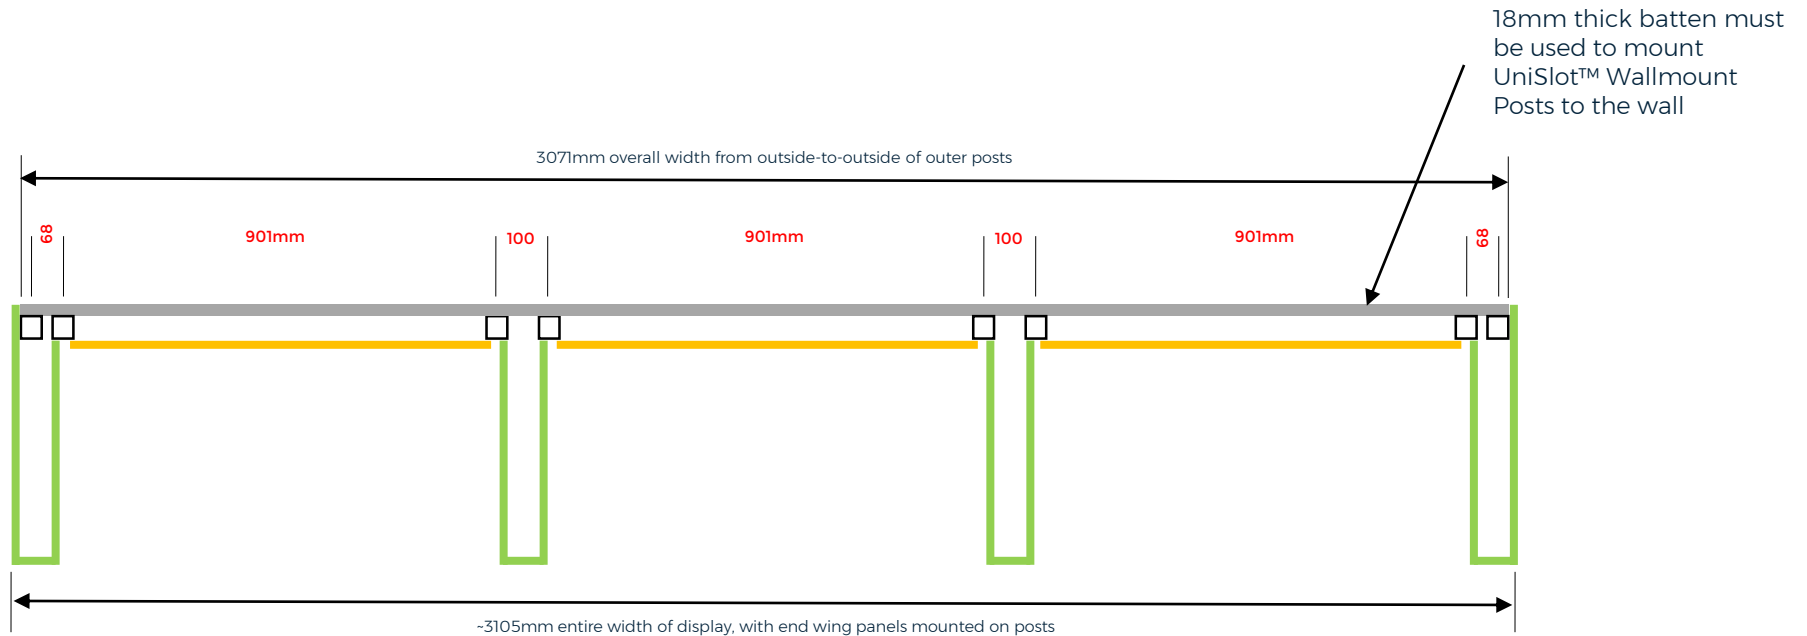

All dimensions in **red** above are measured from the centre of one UniSlot™ post, to the centre of the next.